California Environmental Protection Agency

Air Resources Board

ARB Approved

Installation, Operation and Maintenance Manual

for

Executive Orders

VR-201-K (Healy Phase II EVR System)

and

VR-202-K (Healy Phase II EVR System Including In-Station Diagnostic (ISD) Systems)

NOTICE:

The ARB Approved Installation, Operation and Maintenance Manual for VR-201-K and VR-202-K describes the tools, method and skill levels required to install both the Healy Phase II EVR System Not Including ISD, ARB Executive Order VR-201-K and the Healy Phase II EVR System Including ISD Systems, ARB Executive Order VR-202-K.

Unless specified otherwise, only skilled technicians that are trained, certified and licensed by Franklin Fueling Systems (i.e. Healy or INCON Certified Technicians) are able to perform installation, maintenance or repairs of components manufactured by Franklin Fueling Systems or warranty will be void. However, GDF Owner / Operator can remove and install hanging hardware (nozzle, curb hose, breakaway, flow limiter and whip hose).

It is the responsibility of each Healy Certified Technician to be familiar with the current requirements of state, federal, local codes and air district rules and regulations for installation and repair of gasoline dispensing equipment.

It is also the responsibility of the Healy Certified Technician to be aware of all the necessary safety precautions and site safety requirements to assure a safe and trouble free installation.

Unless specified otherwise, only skilled technicians that are trained, certified and licensed by Veeder-Root are able to perform installation, maintenance or repairs of components manufactured by

Veeder-Root, or warranty will be void.

It is the responsibility of each Veeder-Root technician to be familiar with the current requirements of state, federal, local codes and air district rules and regulations for installation and repair of gasoline dispensing equipment.

It is also the responsibility of the Veeder-Root technician to be aware of all the necessary safety precautions and site safety requirements to assure a safe and trouble free installation.

It is the responsibility of each INCON Certified Technician to be familiar with the current requirements of state, federal, local codes and air district rules and regulations for installation and repair of gasoline dispensing equipment.

It is also the responsibility of the INCON Certified Technician to be aware of all the necessary safety precautions and site safety requirements to assure a safe and trouble free installation.

A copy of the Veeder-Root In-Station Diagnostic System Troubleshooting Guide can be found at http://www.veeder.com.

A Copy of the INCON VRM Troubleshooting and Diagnostics Guide can be found at http://www.franklinfueling.com.

A copy of the Healy EVR Troubleshooting Guide can be found at http://www.franklinfueling.com.

To confirm a Healy or INCON Certified Technician training status, a regulator can access a searchable database at the following web site: http://www.franklinfueling.com/CertifiedInstallers.asp

To confirm Veeder-Root TLS or ISD training a regulator should send an email to technicaltraining@gilbarco.com with the name (and company) of the ASC to obtain verification of the ASC TLS/ISD training status or call 800-997-7725 and press "*" to get to the Veeder-Root menu and "*" again to speak to a representative.

Table of Contents

Healy Installation, Operation and Maintenance Manual¹

| Component | | arts on Page |
|---|---|-----------------|
| Scheduled Maintenance | Healy Phase II EVR System | 1 |
| Nozzle | Healy Model 900 | 11 |
| Clean Air Separator Pressure Management System | Healy Model 9961 and 9961H | 21 |
| Inverted Coaxial Hoses | Healy Model 75 Series | 33 |
| Hose Adaptors | Healy Model CX6 Series | 36 |
| Reconnectable Breakaway Couplings | Healy Model 8701VV | 37 |
| | Healy Model 807 | 40 |
| Flow Limiters | Healy Model 1301 Healy Model 1302 | 43 44 |
| Dispensers with Healy Model VP1000 | | |
| Vacuum Pump | Gilbarco Encore 300 & 500 Series ² 45 | |
| | Gilbarco GasBoy 9800 Series | 78 |
| | Wayne Harmony Series (Balance | 98 |
| | Wayne Harmony Series (Assist) | 117 |
| | Wayne Ovation Series | 137 |
| | Wayne Vista Series | 161 |
| | Wayne Global Century, Select and Reliance Series | 178 |
| | Healy Universal Manual | 195 |

¹ All components listed on this page of the Table of Contents are applicable to both Executive Order VR-201-K (Healy Phase II EVR System Not Including ISD) and Executive Order VR-202-K (Healy Phase II EVR Systems with In-Station Diagnostics Systems).

² An additional section, Section 18 has been added which provides instruction on how to install the VP1000 vacuum pump in the dispenser cabinet to allow for the ISD flow meter to be installed above the vapor shear valve.

In-Station Diagnostics (ISD) Systems Install, Setup, & Operation Guide and Manuals³

Veeder-Root ISD Install, Setup, & Operation Manual

Veeder-Root ISD Vapor Flow Meter Installation Manual

Veeder-Root ISD Pressure Sensor Installation Guide

INCON Vapor Recovery Monitoring (VRM) Installation, Operation, & Maintenance Manual

INCON Vapor Flow Meter (VFM) Installation Guide

INCON Vapor Pressure Sensor (VPS) Installation Guide

INCON Data Transfer Unit Dispenser Retrofit Manual

INCON Console DTU (Data Transfer Unit) Installation Instructions

³ All components listed on this page of the Table of Contents are ONLY applicable to Executive Order VR-202-K (Healy Phase II EVR System with In-Station Diagnostics Systems).